


How to connect internal batteries after receiving UPS

For transport safety UPS gets delivered with disconnected batteries.


Follow the steps and charts as below to connect batteries prior to installation:

Operation needs to be done by qualified personal. Please follow safety instructions from manual.


1. Pull out the LCD Display, and remove 3 screws. (2 on right side and 1 below Display)

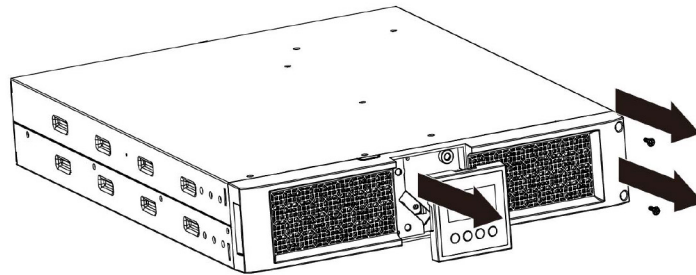

2. Slide and Pull the front panel leftward and then take it off. Take care not to disconnect the LCD cable from PCBA and display.

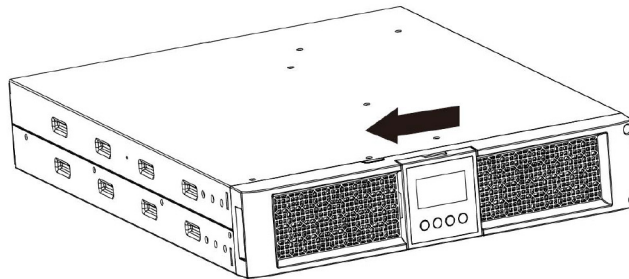

3. Reconnect the battery cable A and B, red to red and black to black, and fix the black wire to the locker as right picture shows.

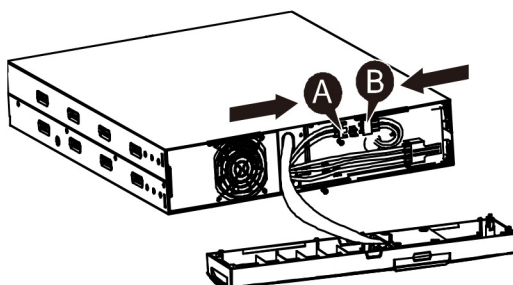


Warning: If the below Anderson black lockers are loosen, you **MUST** reassemble the male & female as below picture3 shows. The wrong connection may cause burnt issue!



Picture 1



Picture 2

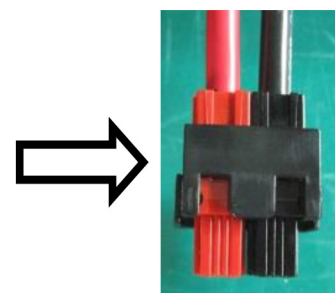

Picture 3

4. Re-install the front panel back to UPS.